

Transition Couplings



PVC Schedule 40 & 80

Slip to Flexible



Transitions in One Minute

Save Cost on the Rigid Nipple, Tape & Labor


Use for Entire Job - Not Just for Repair

Reamer NOT Required to Transition from PVC to Flexible Conduit


Apply PVC Cement to Secure & Complete




Step 1
Install PVC Coupling on Conduit Flush or Just Below Grade and Cap with (Conduit Plug IP27c) or Tape Prior to Pour

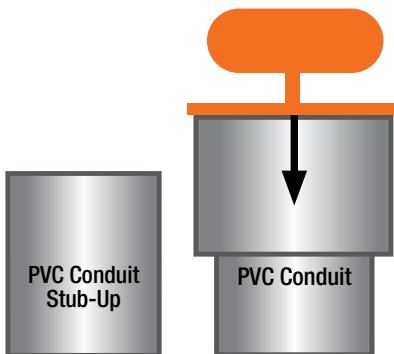

Step 2
Glue Slip FLEX Coupling

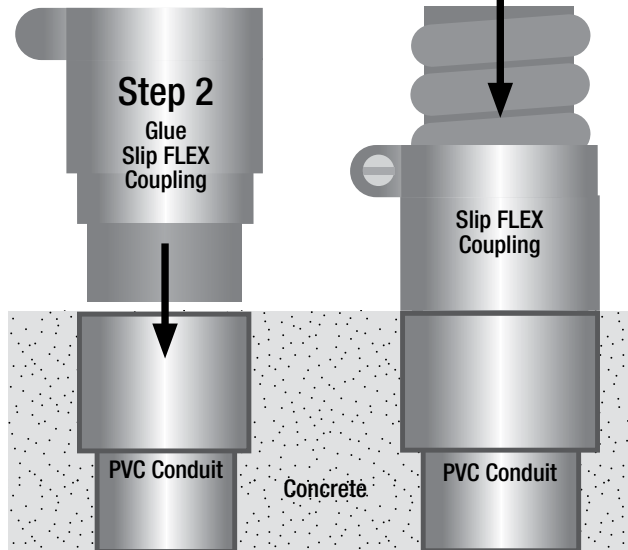

Step 3
Attach FLEX Conduit to Slip FLEX Coupling

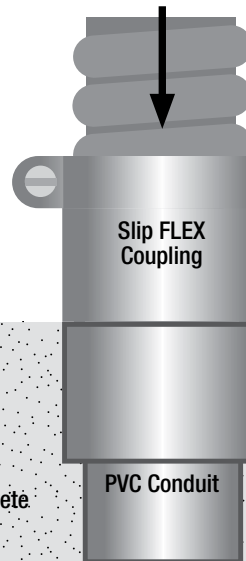

1/2" thru 1-1/2"

Transition Couplings	
Size	Catalog #
1/2"	50 SLIP/FLEX
3/4"	75 SLIP/FLEX
1"	100 SLIP/FLEX
1-1/4"	125 SLIP/FLEX
1-1/2"	150 SLIP/FLEX

All SP Products Inc. Transition Fittings are manufactured for installation to either meet or exceed in accordance with NEMA TC2, TC3 or UL 651 specifications

Customer must satisfy all codes and owners' specifications.



PATENT PENDING
PATENTED



LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE

730 Pratt Boulevard • Elk Grove Village, IL 60007
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595
E: info@spproducts.com • www.spproducts.com

IP12b