



Slip PVC Transition Couplings to Smooth Grounding Bushing PVC Schedule 40 & 80

**NO
REAMING TOOL
REQUIRED**



**Transitions into
PVC Standard Coupling**

**Save Cost on the Rigid
Nipple, Tape & Labor**

**Use for Entire Job -
Not Just for Repair**

**Apply PVC Cement
to Secure & Complete**

See Our
Conduit Plug
See page IP27c



Save
at Least
1 Hour per
Installation.

1/2" thru 4"

c **US**
PATENTED

SEE WEBSITE
VIDEO **IP12h**


Step 1

Install PVC Coupling
on Conduit or Stub-up
Flusher Just Below
Grade and Cap with
(Conduit Plug IP27c) or
Tape Prior to Pour




Step 2

Glue Slip SB
Coupling

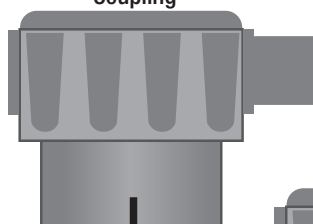

Slip SB
Coupling

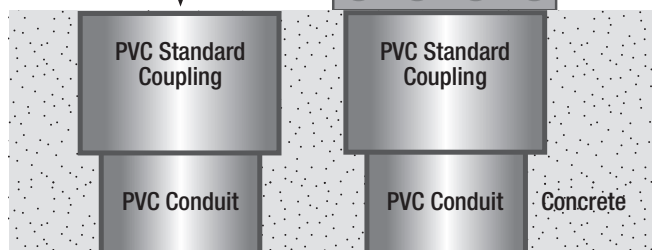

Transition Couplings

Size	Catalog #
1/2"	50 SLIP/SB
3/4"	75 SLIP/SB
1"	100 SLIP/SB
1-1/4"	125 SLIP/SB
1-1/2"	150 SLIP/SB
2"	200 SLIP/SB
2-1/2"	250 SLIP/SB
3"	300 SLIP/SB
3-1/2"	350 SLIP/SB
4"	400 SLIP/SB

All SP Products Inc. Transition
Fittings are manufactured for
installation to either meet or
exceed in accordance with
NEMA TC2, TC3 or UL 651
specifications

Customer must satisfy all codes and owners' specifications.

SP PRODUCTS, INC.
Productivity and value thru ideas



**PATENT PENDING
PATENTED**

LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE



730 Pratt Boulevard • Elk Grove Village, IL 60007
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595
E: info@spproducts.com • www.spproducts.com

IP12i